

# USAGE GUIDELINES

- Slide switch to “PLAY” mode before first use (\*please refer to illustration to the right).
- Set up your mat on a clean, dry floor. Remove any small, crushable objects from the play area. **Mat-A-Matics** is suitable for indoor use on a flat surface.
- Try **Mat-A-Matics** with no-slip socks, or your bare feet, just make sure it doesn't feel too slippery, especially in warm weather conditions.
- This is a real workout! Remember to take a rest every twenty minutes or so. If you and your dance partner Mat are starting to get sweaty, take a water break. Dancers need to hydrate!
- Please store **Mat-A-Matics** with care, as in the original packaging. Do not fold the mat into quarters. Do not place heavy objects on top of the folded mat.

# CLEANING RECOMMENDATIONS

Clean the surface of the mat with a damp cloth. Resistant stains on the mat may be caused by mis-usage. Please follow the usage guidelines carefully.

# REPLACING BATTERIES

## 3AA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Use alkaline batteries for longer play time.
- Dead batteries? Check out [earth911.com](http://earth911.com) to quickly find the recycling center nearest you


Get down at [mybtoys.com](http://mybtoys.com)

If you have questions, comments or just need help hanging your disco ball, call us (toll free).

1-866-665-5524

© 2014 Maison Joseph Battat Ltd. B. and Mat-A-Matics and Just B. Just You. B. You are trademarks of Maison Joseph Battat Ltd.

Manufactured for Maison Joseph Battat Ltd.  
8440 Darnley Road, Montreal,  
P.Q. H4T 1M4  
Designed by Maison Joseph Battat Ltd.  
Consumer Information Line:  
1-866-665-5524

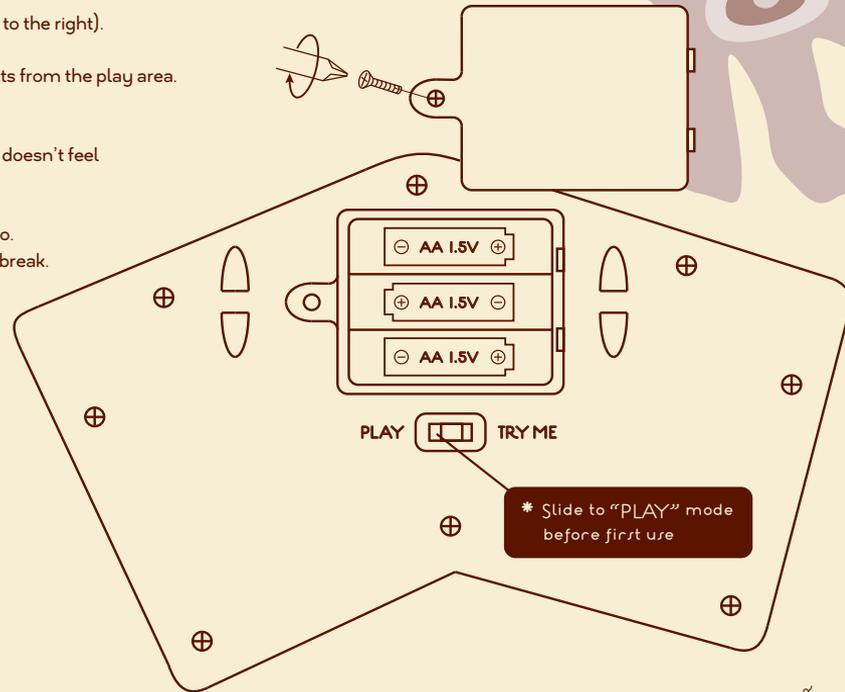

100% RECYCLED  
WOOD-FREE PAPER  
PRINTED WITH  
SOY-BASED INKS



# B.

## Mat-A-Matics™

3 TO 10 YEARS

### FUNCTIONS

1. On and off (off and on) switch
2. Soft, padded tiles for little toes to tap
3. The notes light up, just follow the beat
4. VOLUME CONTROLS  
From quiet time to party time

5. TEMPO CONTROL  
Try a slow start for beginners, then speed it up as you learn the moves.
  6. PREVIOUS / NEXT  
Play it again, or skip to the next track.
  7. PLAY / STOP CONTROL  
Begin a new game, or end one if you must.
  8. MEMORY MUSIC  
Complete any or all of 10 favorite nursery songs by repeating the steps. Step on the note as it lights up, then step off it and step on the next note that glows. Do you remember how it goes?
  9. SUPER DANCE  
Follow the lights and groove to 10 original dance hits. So quick and catchy, everyone will want to dance along! Won't it be funny to watch the grown-ups try?
  10. WACKY SOUNDS  
Bounce around the mat to hear silly sounds, jiggly giggles and farts—sorry, Mom.
- II. MELODY MIX  
Step anywhere on the mat and familiar nursery songs will sing. So simple you can even let your little brother try.  
Great for one more turn before bed.

