

- Print in PMS4695 U ■ (SOY-BASED INKS)
- Print MONOTONE High Resolution picture as PMS4695 U
- Print on 128 g 100% Recycled Woodfree Paper
- Don't print dieline & PMS7500 U

B.

Woofer®

2 YEARS + UP

FUNCTIONS


1. CHORD BUTTONS

Eight buttons play eight musical chords. Full C to C scale lets you compose any song.

A chord is when three or more notes are played simultaneously. Chords offer a much richer sound than single notes or plucked strings. Woofer's chords were recorded in a studio to be beautiful decaying chords with tones that decay and linger...gently fading as the next chord is played.

2. FUN/OFF SWITCH

Turn dial to select play mode: Electric, Acoustic or Howl Dog. Turning dial to "Off" offers the obvious effect.

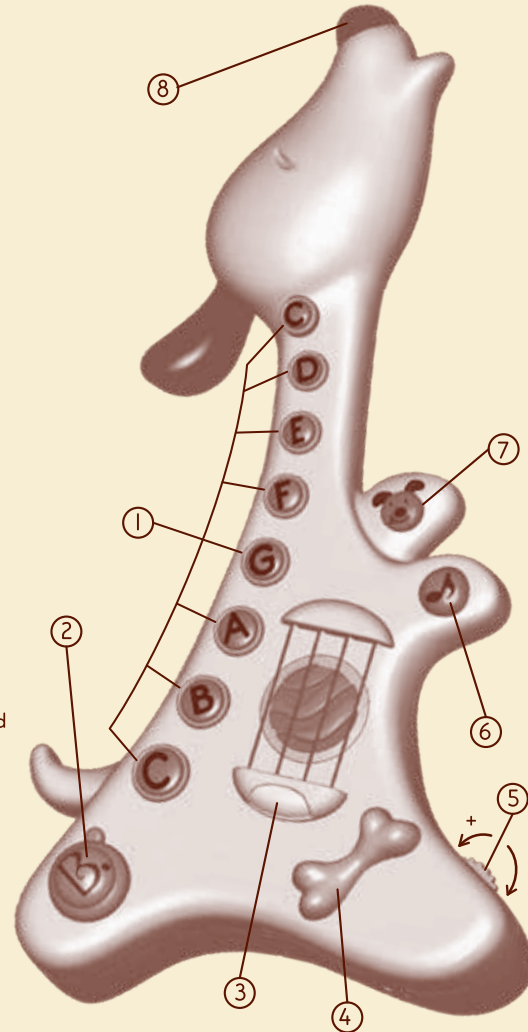

3. STRUM BUTTON

When strum button is pressed, strumming the strings will play one of 20 familiar songs. It feels like you are really playing the guitar! Every strum of the strings advances the song by 2 seconds. Keep strumming to keep the song going! Push the 🐾 to jump to the next song.

When strum button is NOT pressed, strumming the strings will play chords that appear random, but if you look at your Lyrics booklet (included), you'll find they are actually chord progressions you could sing along to!

4. WHAMMY BONE

Use the Whammy Bone at just the right moment to make any song all yours. Discover a different effect in each mode: Electric, Acoustic or Howl Dog.

5. VOLUME CONTROL

Keeps everyone out of the doghouse.

6. MUSIC NOTE BUTTON

Press the 🎵 to play familiar songs without lyrics. Sing the traditional lyrics or create your own. B. you! Pushing the 🎵 again jumps to the next song.

7. DOGGY BUTTON

Press the 🐶 to play one of 9 Peppy Puppy songs. Press the 🐶 again to jump to the next song.

8. STOP

The nose knows when it's time to stop. No matter what is playing.

Auto Off — When left alone for 2 minutes, Woofer howls at the moon then automatically shuts off. Good doggy.

BX1166


8.125" x 5.75"

- Print in PMS4695 U ■ (SOY-BASED INKS)
- Print MONOTONE High Resolution picture as PMS4695 U
- Print on 128 g 100% Recycled Woodfree Paper
- Don't print dieline & PMS7500 U

B.

Woofer.

2 YEARS + UP

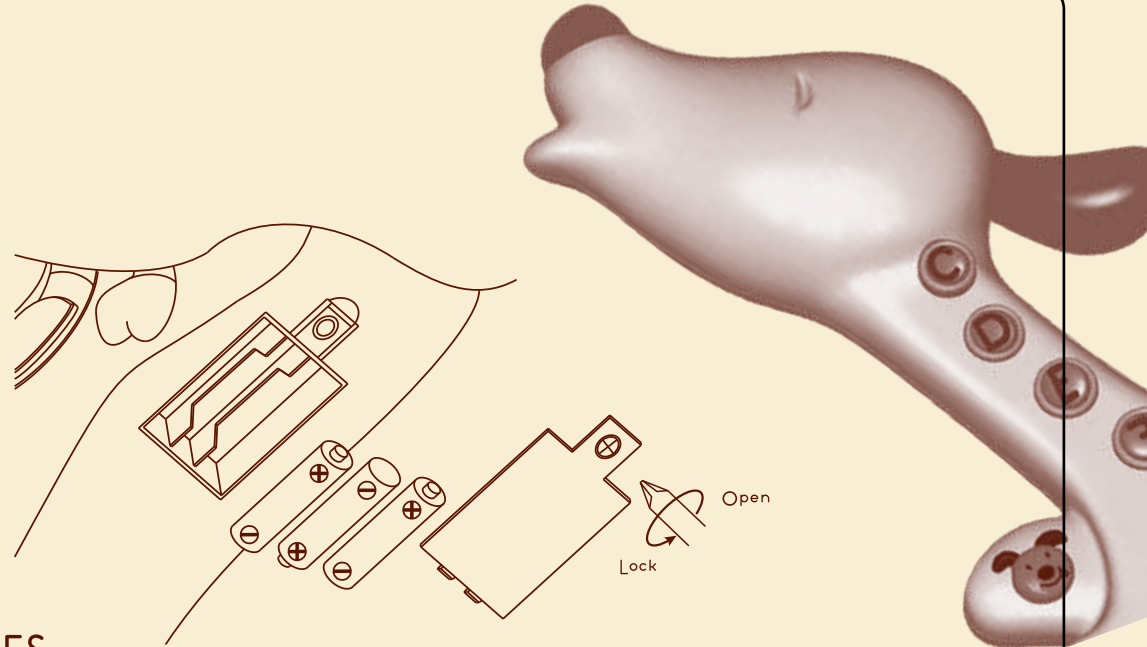

REPLACING BATTERIES

3 AA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Dead batteries? Check out earth911.com to quickly find the recycling center nearest you

Sniff out more about B.

at mybtoys.com. If you have questions, comments or you just want to throw us a bone, call us (toll free).

1-866-665-5524

©2017 Maison Battat Inc.
B. and Woofer and Just B. Just You. B. You are trademarks of Maison Battat Inc.

Manufactured for Maison Battat Inc.
8440 Darnley Road, Montreal, P.Q. H4T 1M4
Designed by Maison Battat Inc.

100% RECYCLED
WOOD-FREE PAPER
PRINTED WITH
SOY-BASED INKS



8.125" x 5.75"