


B.

Ribbit-tat-tat™

2 YEARS +

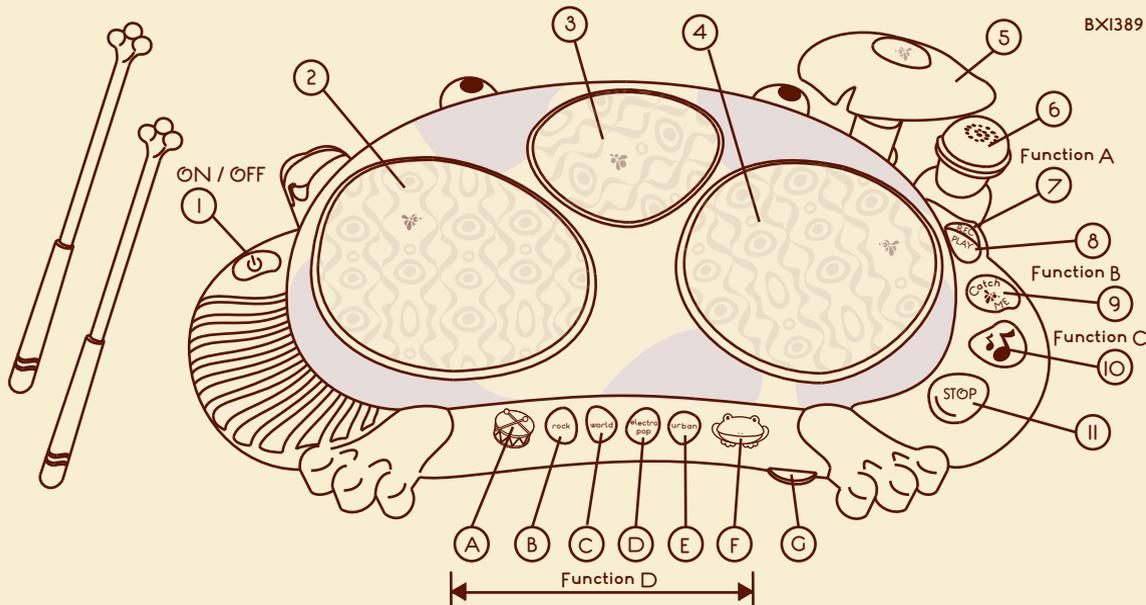

BUTTON FUNCTIONS

1. ON / OFF switch
2. Drum pad 1
3. Drum pad 2
4. Drum pad 3
5. Lily pad cymbal
6. Microphone
(sing directly into the microphone for best results)
7. Record your own voice
8. Play back recordings
9. Catch The Fly Game
10. Tadpole Nursery Jams
11. Press STOP to quit functions

- A) Drum beats
- B) Rock
- C) World
- D) Electro-pop
- E) Urban
- F) Ribbity Rhythms
- G) Volume

DRUM FUNCTIONS

DRUM BEATS:

Use this function alone to play solo or press an additional button (B, C, D, or E) to layer your drumming over the music.

RIBBITY RHYTHMS:

Use this function alone to play solo or press an additional button (B, C, D, or E) to layer your ribbiting over the music.

PRESS DRUMS (A) or RIBBITY RHYTHMS (F) ONCE in Rock, World, Electro Pop, or Urban function to play along with the selected musical genre.

PRESS DRUMS (A) or RIBBITY RHYTHMS (F) TWICE in Rock, World, Electro Pop, or Urban function to play the songs without the drum track so you can lay down your own.

MORE RIBBITY FUNCTIONS

BEAT BOX:

Press RECORD (7) while singing or speaking into the MIC. (6) – you have a few seconds, try singing “HOP TO THE MUSIC!”. Press PLAY (8) to hear cool voice effects in playback. Press PLAY (8) again to play your recording with a different track. Two radical new songs with every recording!

CATCH THE FLY:

Slurpicious froggy fun! Press CATCH ME (9), the image of a fly will appear on one of the DRUM PADS (2-5), tap the pad (with hands or drumsticks) before the fly lands on another pad. The fly gets faster and so will you. Can you get to level five?

TADPOLE NURSERY JAMS:

Press (10) to hear familiar favorites.

REPLACING BATTERIES

4 AA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Dead batteries? Check out earth911.com to quickly find the recycling center nearest you.




The recording function may be disrupted due to electromagnetic interference. Simply turn it off and back on again to reset. Change location if problem persists.

© 2019 Maison Battat Inc.

B. and Ribbit-tat-tat and **Just B. Just You. B. You** are trademarks of Maison Battat Inc.

Manufactured for Maison Battat Inc.
8440 Darnley Road, Montreal, P.Q. H4T 1M4
Designed by Maison Battat Inc.
Consumer Information Line: 1-866-665-5524

Please remove all packaging materials before giving to children.

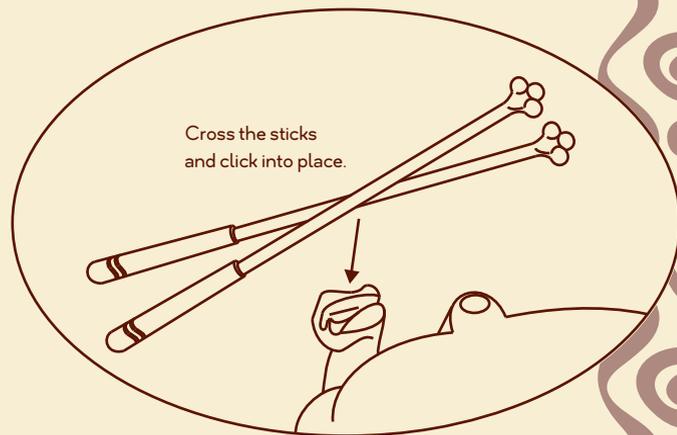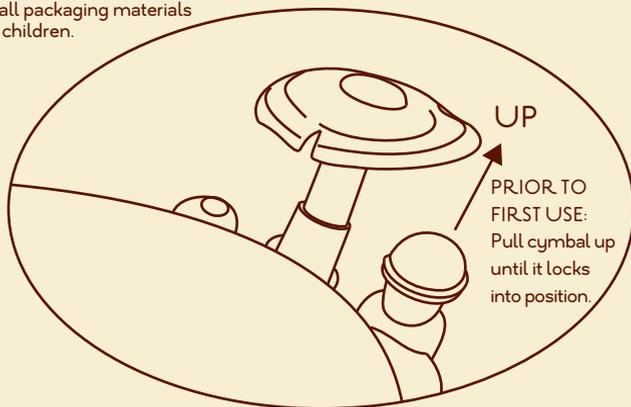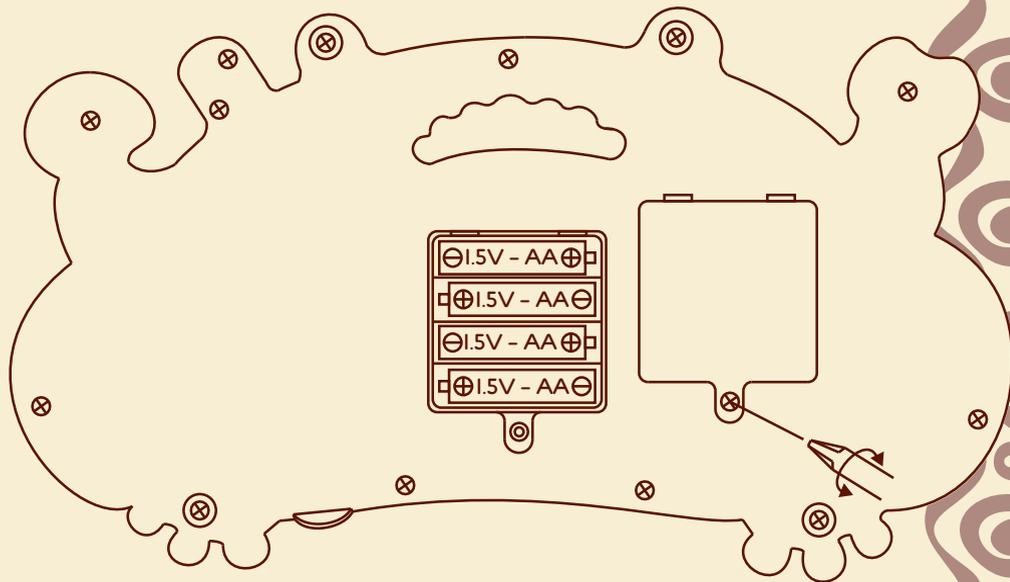

100% RECYCLED
WOOD-FREE PAPER
PRINTED WITH
SOY-BASED INKS

