Mooosical Gears

18 MONTHS +

Fun and interactive shape sorter with a baaa-zillion playful features.

Two fun modes for your mooosical band




Spinning mode

- Match the shapes on the bottom of each animal to the shapes on the gear. Pop them on and hear them make their very own animal sound.
- Use the mushroom knob (2) to spin the gears (1) and play some cool tunes!
- When you spin the gears, the animals will sing along! The more animals you place, the more animals sounds you hear! When you remove an animal, the animal sound will stop as well.
- When you stop the spinning gears, the music will stop. Start up again and the music will pick up where it left off!
- Spinning the gears also makes the chicken's dome (3) light up. Party in the chicken coop!
- Press the fly button (4) to stop the music and to skip to the next song.

▶ Music Only mode

·Similar to spinning mode, the full song will start to play as soon as you place an animal on its gear (I)— a quick spin of the gears also does the trick.

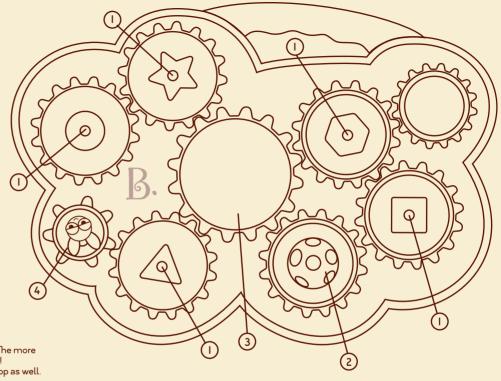











Spin + Music Music Only AA 1.5V ATTENTION: Caution: changes or modifications not expressly approved by the party responsible for compliance coul

REPLACING BATTERIES

3 AA (I.5V) BATTERIES INCLUDED

- · Do not mix old and new batteries.
- · Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- · Do not throw this product or it's batteries in a fire as batteries may explode or leak.
- · Dead batteries? Check out earth911.com to guickly find the recycling center nearest you.

Come see how B is rocking and rolling at mybtoys com

If you have any questions, comments, don't leave them in the barn. Call us (toll free), 1-866-665-5524

> Please remove all packaging materials before giving to children.





100% RECYCLED WOOD-FREE PAPER PRINTED WITH SOY-BASED INKS

© 2019 Maison Battat Inc. B. and Mooosical Gears and Just B. Just You. B. You are trademarks of Maison Battat Inc

Manufactured for Maison Battat Inc. 8440 Darnley Road Montreal, P.Q. H4T IM4 Designed by Maison Battat Inc. Consumer Information Line: 1-866-665-5524 Visit us at

www.mybtoys.com

BXI536

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician

void the user's authority to operate the equipment. NOTE: This

equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection again harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if

not installed and used in accordance with the instructions, may

cause harmful interference to radio communications. However,

there is no avarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

Reorient or relocate the receiving antenna.

the following measures:

Power off

Low volume

High volume

The music plays only when Spin + Music you spin the gears.

Music Only

The music plays as soon as you put animals on the gears. No spinning required!