

# B.

GIGGLY ZIPPIES™

Hank™

2 YEARS +

Zipper here. Button there...  
A giggling and wiggling dress up  
buddy to take anywhere.

Buttons, zippers, laces and buckles!  
With a side of adorable chuckles.



Press Hank's tummy to see him wiggle n' giggle!



To access sound unit, remove Hank's jacket.



Remove sound unit from BACK opening to replace batteries.

## REPLACING BATTERIES

### 2 AA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Dead batteries? Check out [earth911.com](http://earth911.com) to quickly find the recycling center nearest you.

**ATTENTION:** When the module's functions lose performance, follow instructions carefully to install new batteries. When this toy is in use, please always point away from face.

Come and see our amazing world at [mybtoys.com](http://mybtoys.com). Fancy a chat or a giggle? If you have any questions, Call us (toll free), 1-866-665-5524

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CLEANING INSTRUCTIONS:

Make sure to remove the battery pack before washing your laughing buddy. Machine wash, cold. Tumble dry at a low heat.



## Replacing batteries

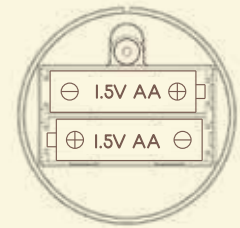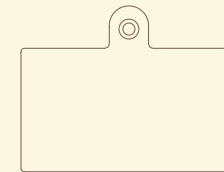

© 2019 Maison Battat Inc.  
B. and Giggly Zippies and Hank  
and Just B. Just You. B. You  
are trademarks of  
Maison Battat Inc.  
Manufactured for Maison Battat Inc.  
8440 Darnley Road,  
Montreal, P.Q. H4T 1M4  
Designed by Maison Battat Inc.  
Consumer Information Line:  
1-866-665-5524

Visit us at  
[www.mybtoys.com](http://www.mybtoys.com)

100% RECYCLED  
WOOD-FREE PAPER  
WITH VEGETABLE  
SOY-BASED INKS



BX1579