lights UP and get down!

Skippity Dooda™

5 YEARS +

lump up and down to see rainbow lights shine all around

A LIL' WORD OF ADVICE!

- To avoid malfunction, don't play with your Skippity Doo da near puddles or under the rain. Never immerse it in water!
- As always, don't let kids tie this rope around their neck. Adult supervision is always ideal.

REPLACING BATTERIES

2 x AAA BATTERIES INCLUDED

- Do not mix old and new batteries.
- ·Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- · Dead batteries? Check out earth911.com to quickly find the recycling center nearest you.



2. Insert 2 new AAA batteries.

3. Close back and secure with the screwdriver.


Gently straighten the rope before first use!

FUNCTIONS

- · Press the ON button to see the lights follow as you go!
- · Press again to switch from Flashing Mode to Color-Changing Mode.
- · And one more push to turn everything OFF.

Flashing Mode: Lights flash faster as you step up the pace.

Color-Changing Mode: Colors change faster as you step up the pace.

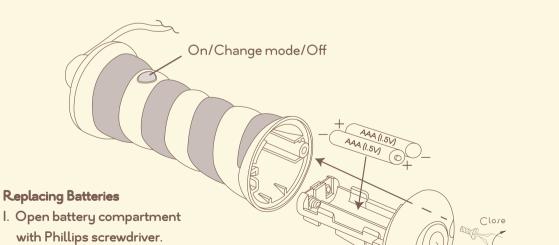

© 2018 Maison Battat Inc. B. and Skippity Doo da and Just B. Just You. B. You are trademarks of Maison Battat Inc.

Manufactured for Maison Battat Inc. 8440 Darnley Road, Montreal, P.Q. H4T IM4 Designed by Maison Battat Inc. Consumer Information Line: 1-866-665-5524

Visit us at www.mybtoys.com BX1636

WARNING

Not suitable for children under 18 months. Long cord/Long chain. Strangulation hazard.





