

**B**<sup>toys</sup>

18m+

**LIST OF PIECES**

(A)



Long poles x 2 pcs


(B)




Tent x 1 pc

**B. Outdoorsy**  
Outdoor play tent


**STEP 1** Unfold the tent.

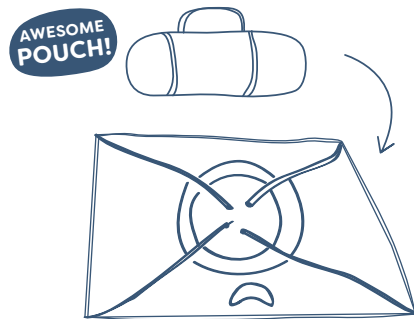

**STEP 2** Assemble poles.

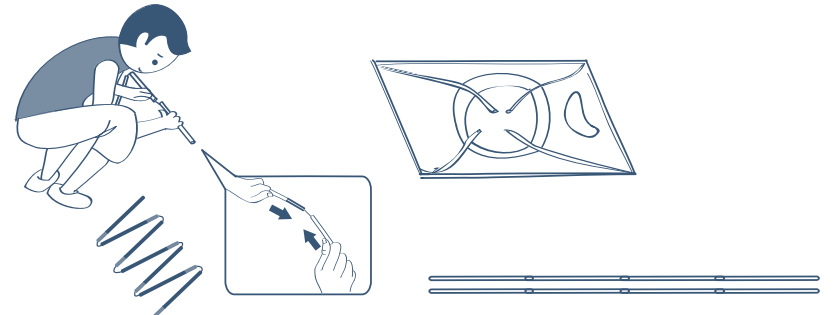

**STEP 3** Insert pole (A) through the pole sleeves to elevate the walls.

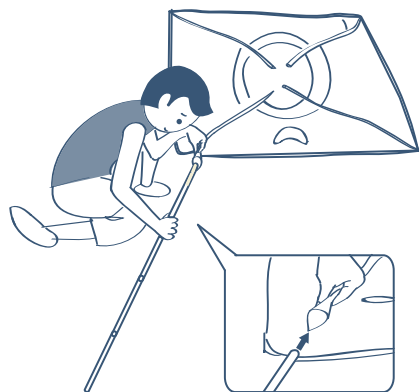

**STEP 4** Connect the poles to the base of each corner.



**STEP 5** VOILA!



- Cleaning instructions: Wipes clean with a damp cloth. Surface clean only.
- Do not twist or force the frame when folding up the tent.
- The product is not fire proof. Never play near a live fire or allow it to have direct contact to any heat source.
- The tent is not waterproof.
- For prolonged storage, protect this product with a dust cover and keep it in a dry shelter.

**CAUTION:** Adult assembly required.  
Keep plastic bags out of children's reach during and after assembly



Please remove all packaging materials before giving to children.

© 2020 Maison Battat Inc.  
**B. toys** and **Just B. Just You. B. You** are trademarks of Maison Battat Inc.  
Manufactured for Maison Battat Inc.  
8440 Darnley Road, Montreal, P.Q. H4T 1M4  
Designed by Maison Battat Inc.  
Consumer Information Line: 1-866-665-5524  
Visit us at [www.mybtoys.com](http://www.mybtoys.com)  
**BX2051**